




Hipstreet Titan 2 HD Camera Replacement

This guide will assist users in replacing the camera component on the Hipstreet Titan 2 HD.

Written By: Jeffrey

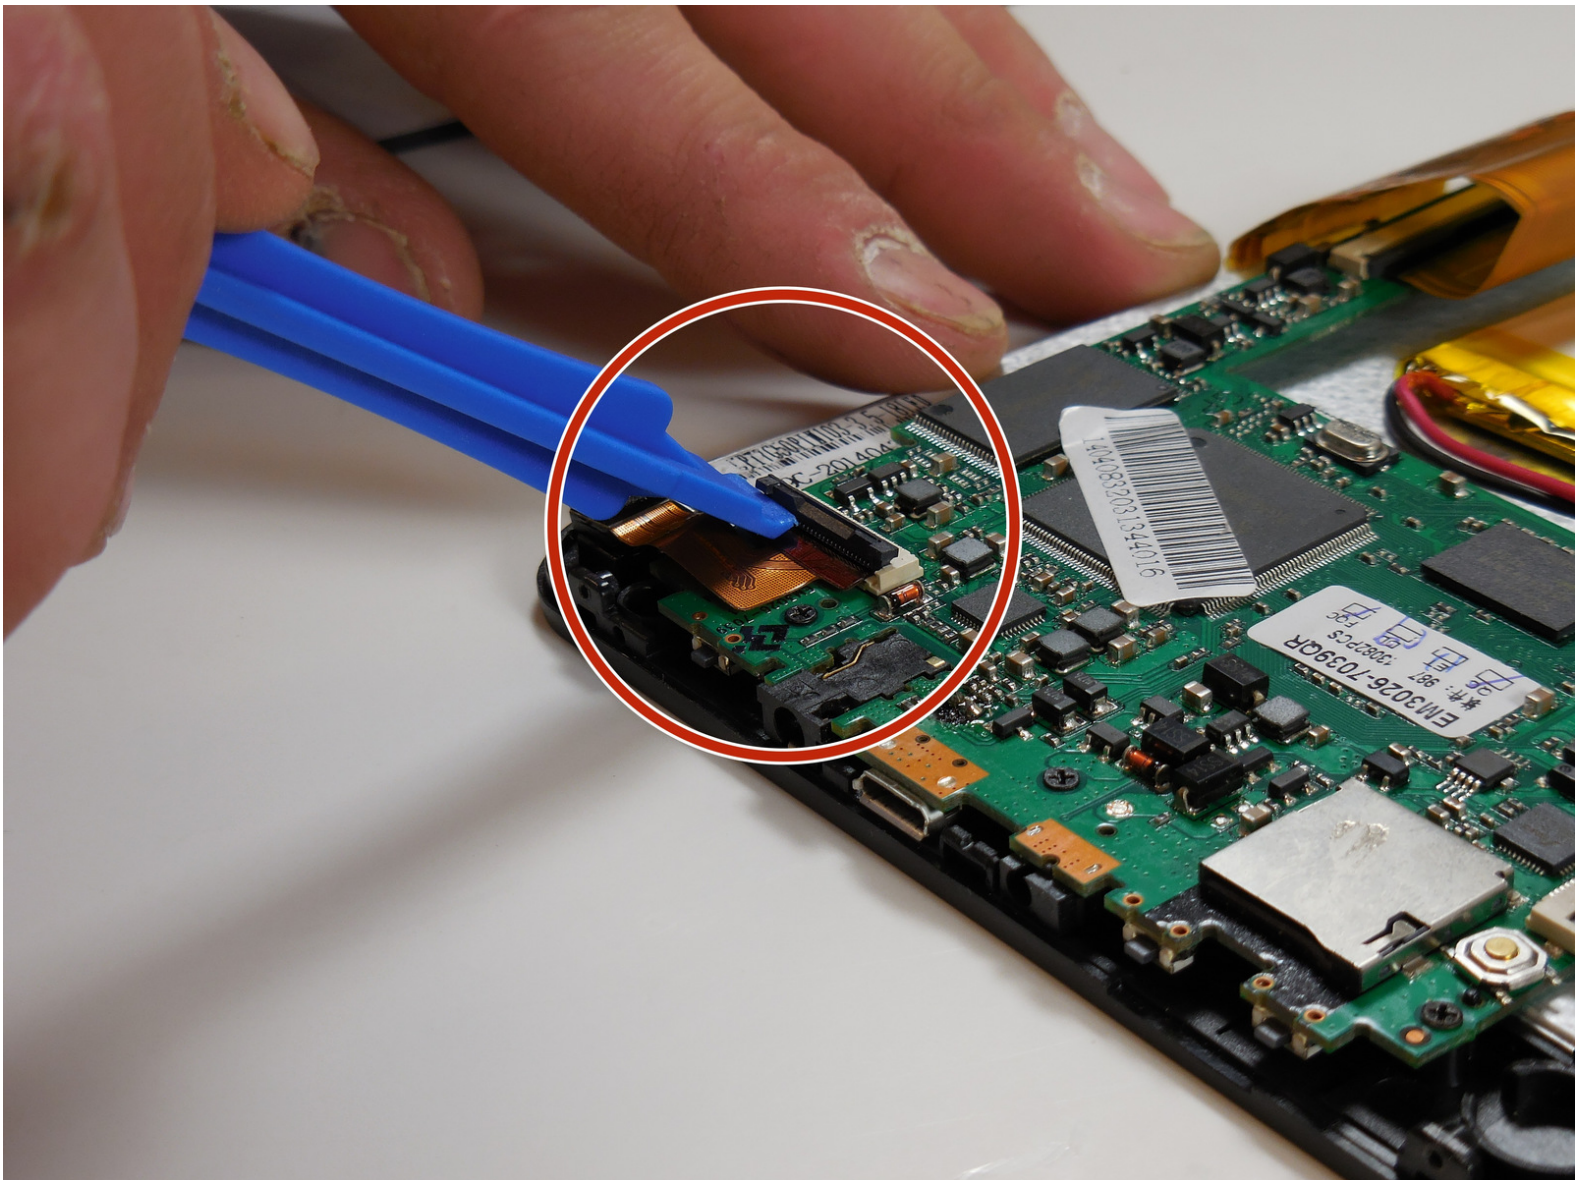

INTRODUCTION


Once you have disassembled the tablet cover, you can now access all of the internal components. This is a simple process and will require a replacement camera to complete.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case

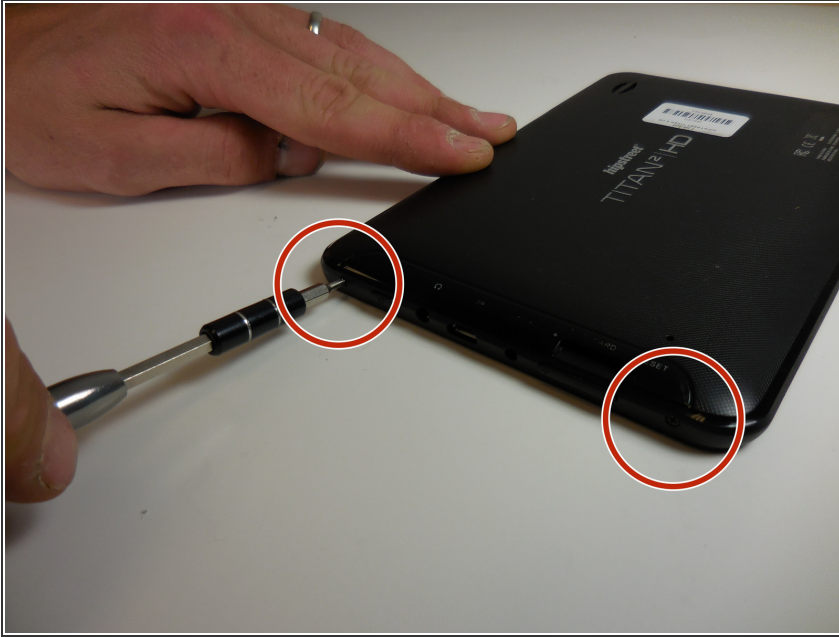


- Using the PH#00 screwdriver, remove the two 0.145 inch Phillips head screws.
- ⓘ The screws are located on the bottom face of the device, near the power and volume controls.

Step 2



- Place the small suction cup on your screen.
- ⓘ Moisturize the bottom of the suction cup to ensure a proper seal.
- ⚠ If the screen is cracked, the suction cup may not seal correctly; too much pressure may crack or damage the screen.

Step 3

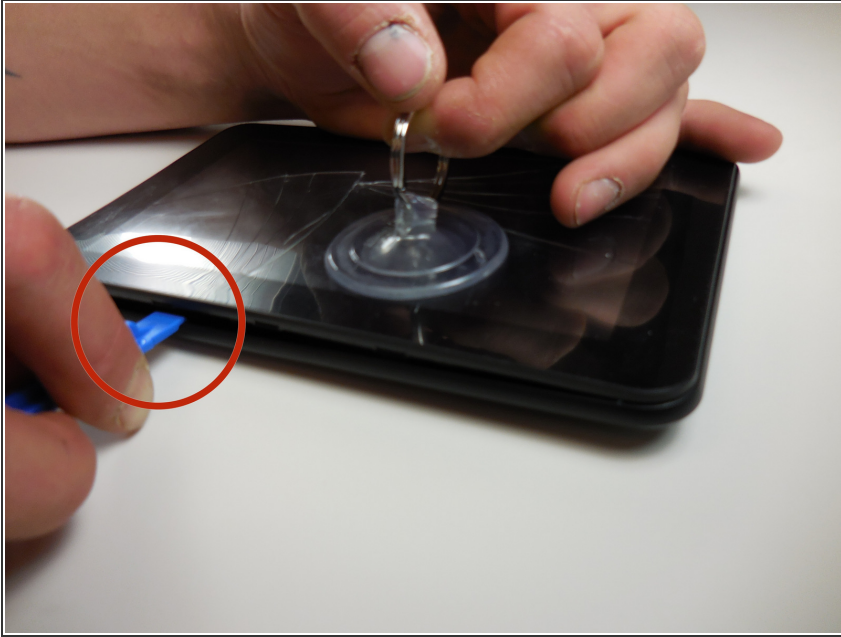

- Insert the plastic opening tool between the screen cover and rear cover of the tablet.
- Grasp the small suction cup.


Step 4



- Slide the plastic opening tool along device edge to separate the screen cover from the rear cover.
- Pull upward on the small suction cup handle while sliding the opening tool.

⚠ When sliding the plastic opening tool, avoid sliding the tool too far into the cover. This could damage the speaker connector on the back cover.

Step 5

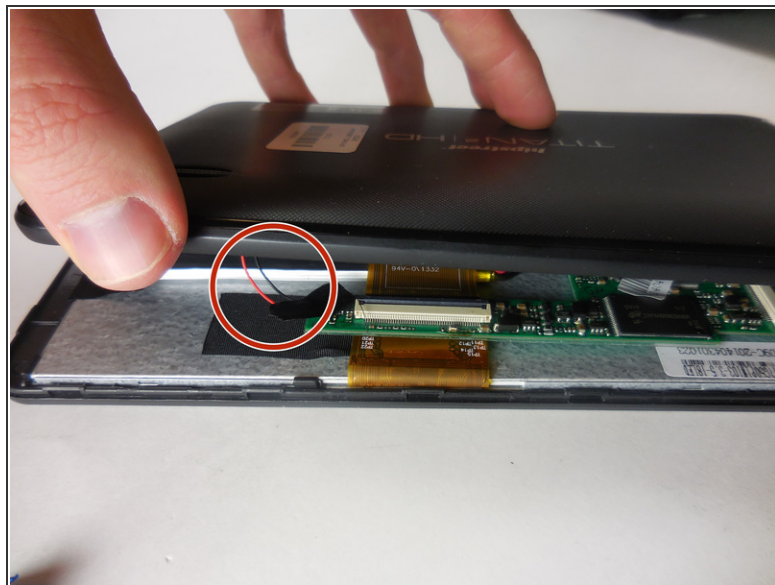


- Use the plastic opening tool to remove the speaker from the rear cover.
- ⓘ The speaker is held in place with adhesive and is easily removed.
- ⚠ Do not pull on the speaker wires. This could damage the soldering connections.

Step 6



- Once the speaker is disconnected, the cover removal is complete.

Step 7 — Camera

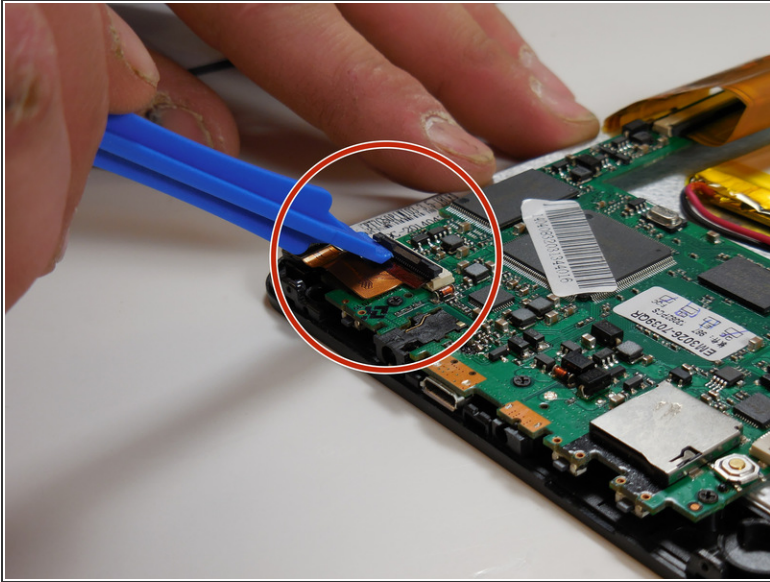

- Use your plastic opening tool to lift the black ribbon connector lock.
- Then, proceed to remove the camera.

Step 8



- Once the camera with the ribbon connector is removed, the process is complete.

To reassemble your device, follow these instructions in reverse order.

